


angor

MATERIAL HANDLING

2217 EDDIE WILLIAMS RD. TEL: (423) 434-9696
JOHNSON CITY, TN 37601 FAX: (423) 434-9797

1. BELT
2. BELT SPROCKETS
3. TENSION STATION
4. FLANGE BEARING
5. DRIVE SHAFT
6. IDLER SHAFT
7. MOTOR
8. GEARBOX
9. SPROCKETS (DRIVE CHAIN)
10. DRIVE CHAIN
11. GEAR BOX SHAFT
12. MOTOR OVERLOAD
13. CASTERS
14. HEAD RUNNER 1 LEFT & RIGHT
15. HEAD RUNNER 2 LEFT & RIGHT
16. HEAD RUNNER 3 LEFT & RIGHT
17. HEAD RUNNER 4 LEFT & RIGHT
18. TOP RADIUS RUNNER 1 LEFT & RIGHT
19. TOP RADIUS RUNNER 2 LEFT & RIGHT
20. TOP RADIUS RUNNER 3 LEFT & RIGHT
21. TOP RADIUS RUNNER 4 LEFT & RIGHT
22. RISER RUNNER 1 LEFT & RIGHT
23. RISER RUNNER 2 LEFT & RIGHT
24. RISER RUNNER 3 LEFT & RIGHT
25. RISER RUNNER 4 LEFT & RIGHT
26. BOTTOM RADIUS RUNNER 1 LEFT & RIGHT
27. BOTTOM RADIUS RUNNER 2 LEFT & RIGHT
28. BOTTOM RADIUS RUNNER 3 LEFT & RIGHT
29. BOTTOM RADIUS RUNNER 4 LEFT AND RIGHT
30. INFEED RUNNER 1 LEFT & RIGHT
31. INFEED RUNNER 2 LEFT & RIGHT
32. INFEED RUNNER 3 LEFT & RIGHT
33. INFEED RUNNER 4 LEFT & RIGHT
34. INFEED RADIUS RUNNER 1 LEFT & RIGHT
35. CHAIN GUARD
36. DEFLECTOR PLATE
37. INSPECTION PIN
38. INSPECTION BIN DOOR
39. STAND
40. HOOD
41. MOTOR MOUNT
42. RAIL LEFT & RIGHT
43. HINGED INFEED COVER
44. BOTTOM RADIUS COVER
45. HINGED RISER COVER
46. HEAD COVER
47. REAR COVER
48. KICK PLATE
49. FRONT CASTER MOUNT
50. CROSS BARS
51. OIL PAN
52. SIDEWALL LEFT & RIGHT
53. GEAR BOX FASTENERS
54. MOTOR MOUNT FASTENERS
55. HOOD FASTENERS
56. STAND FASTENERS
57. CASTER FASTENERS
58. FRONT CASTER MOUNT FASTENERS
59. COVER FASTENERS
60. KICK PLATE FASTENERS
61. RUNNER FASTENERS
62. CROSS BAR FASTENERS
63. FLANGE BEARING FASTENERS
64. TENSION STATION FASTENERS
65. LIFTING SLOTS

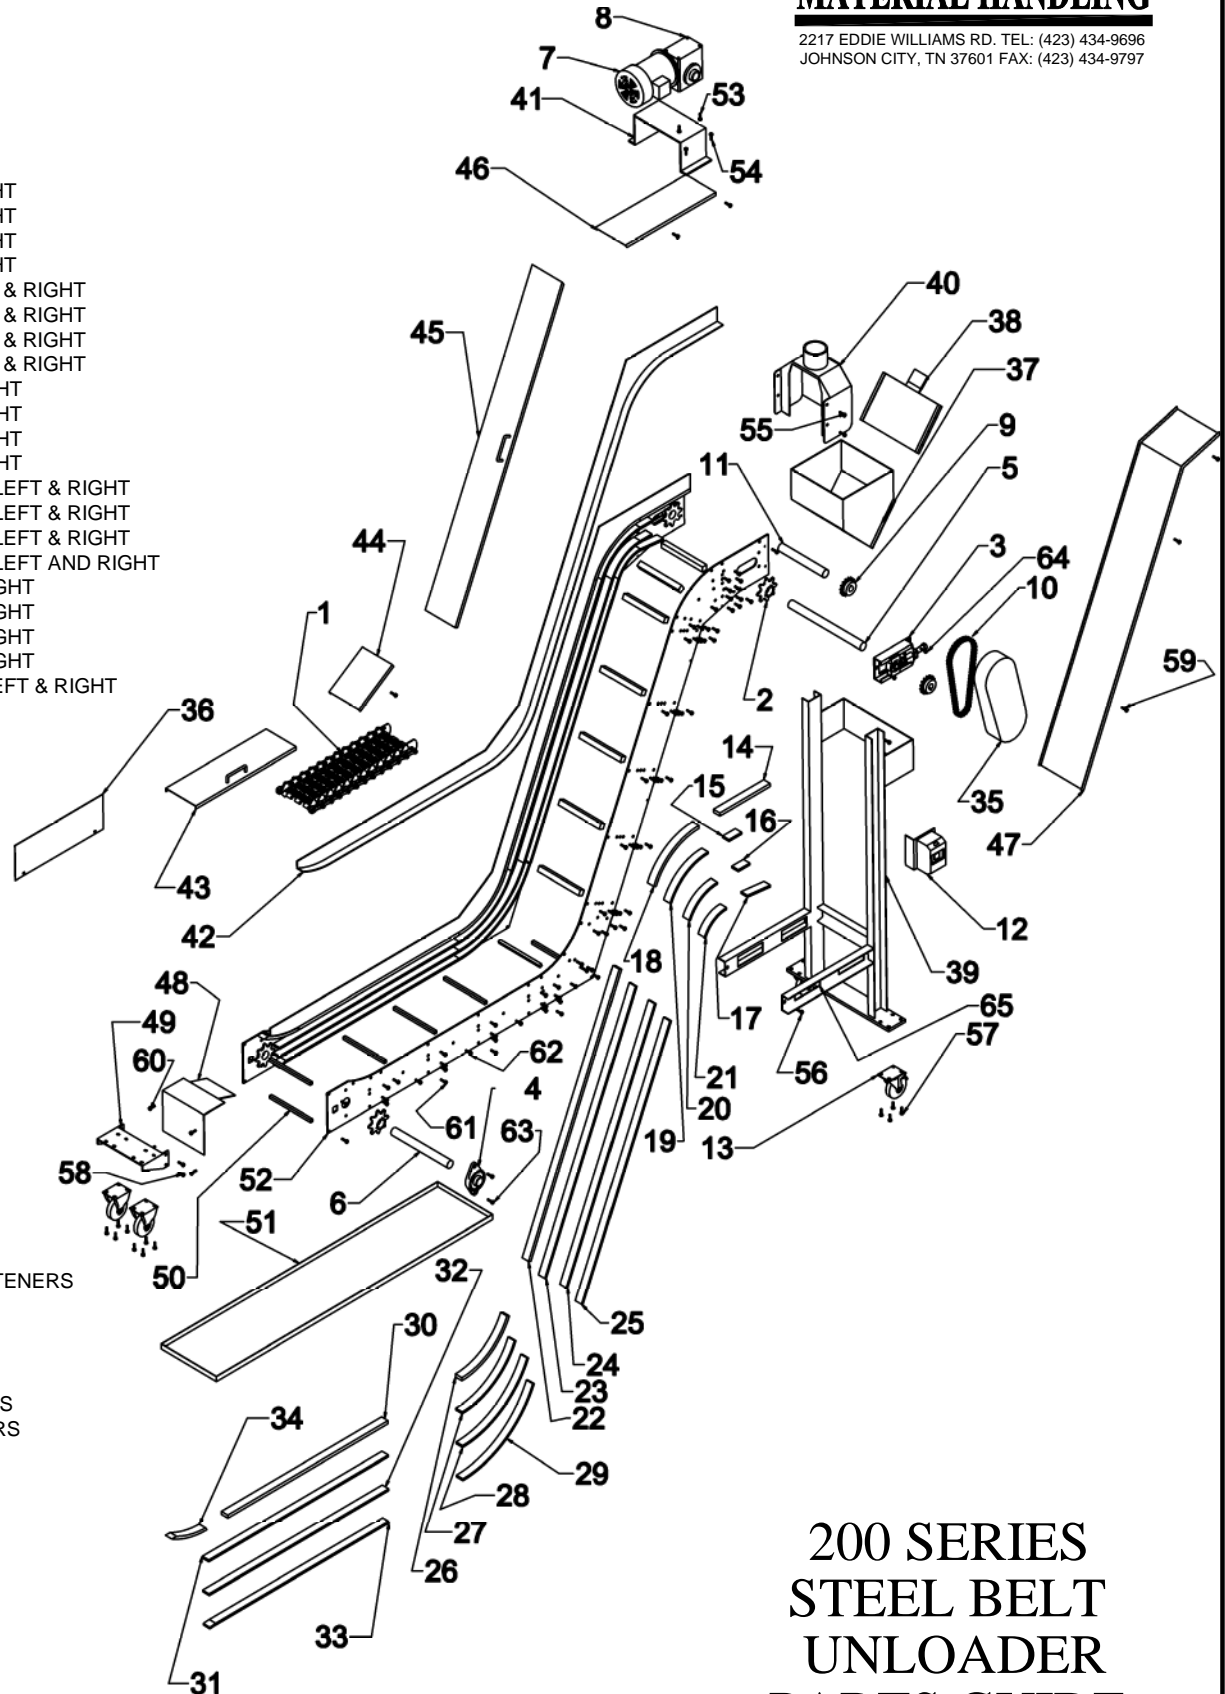

200 SERIES STEEL BELT UNLOADER PARTS GUIDE